

## Receiving Data from the TwinCAT I/O task

### 1st Step TwinCAT I/O task configuration

In the TwinCAT System Manager navigate through "System configuration ->Additional tasks -> Task x". Once there, activate "Create symbol entry".



1. Task.

2. -

3. -

4. -

symbols

Task

Create

5. -

301, 302 . . .

soft PLC,